

CHRONOGRAPH WITH ALARM

ETA Cal. 251.265


Eta Swiss Quartz

317 249 - 11.08.2004 / ETA / 01

GB
USA

DISPLAY **A**

Watch hands

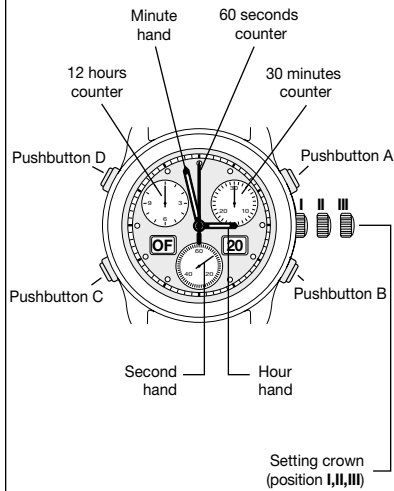

DISPLAY **B**

Digital watch indicators


Left indicator

- Crown position I**
Display of alarm On/Of
Display of alarm function AL
Display of alarm hours
Display of chrono mode CH
Display of chrono functions:
- ADD function: display Ad
- SPLIT function: display SL
- LAP function: display LP

- Crown position II**
Time T1
Display of hours of digital time according to the change of the time zone

- Crown position III**
Time T1
Flashing of hours of digital time
Flashing of month M

Setting crown
(position I, II, III)

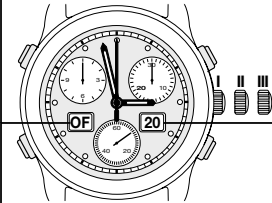

Right indicator

- Crown position I**
Display of date d
Display AM/PM/24H of alarm
Display of alarm minutes
Display of 1/100 seconds in chrono mode

- Crown position II**
Display AM/PM/24H of time
Display of minutes of digital time


- Crown position III**
Display of AM/PM/24H mode
Flashing of minutes of digital time
Flashing of day d

SETTING THE TIME **C**

Setting crown in position III

Choose display of hours AM/PM (f.ex. 11h-12h-1h...) or 24H (f.ex. 11h-12h-13h...). Press < 1 sec.

Digital display of hours/minutes (f.ex. 20h 58). Press < 1 sec.

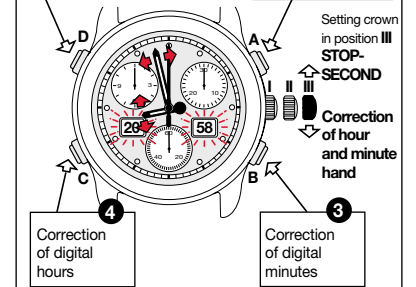


NOTE:
- Make sure that the analog time always corresponds to the digital time.
- In order to perfectly synchronize analog and digital time, stop the second (by pulling the setting crown in position III) just when the second hand reaches 60".

PUSHBUTTONS:
- Quick correction by pressing > 1 sec.

CORRECTION OF MONTH / DATE **D**

Setting crown in position III

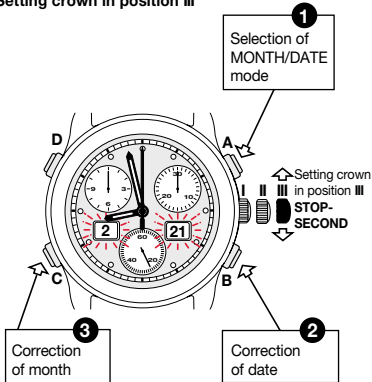


In case of a leap year, February 28 will be followed by March 1.

Set **February 29** by hand:

- Put the setting crown in intermediate position (II) (time zone correction).
- Turn the hour hand twice anti-clockwise (2 full turns).
- Put back the setting crown in position I.

SETTING THE COUNTERS TO ZERO **E**

Setting crown in position II

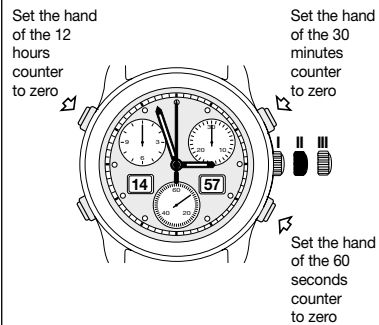


NOTE:

Quick pressure on pushbutton: put forward the hand step by step.


Long pressure (>1 sec.) on pushbutton: quickly put forward the hand.

ALARM **F**

Set the alarm, setting crown in position I

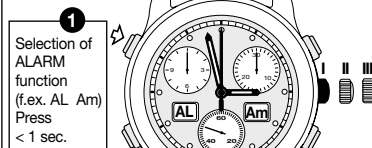


NOTE:
The display of the ALARM function in the left aperture (AL) is automatically followed by the display of the alarm hours (left LCD aperture) and of the alarm minutes (right LCD aperture).

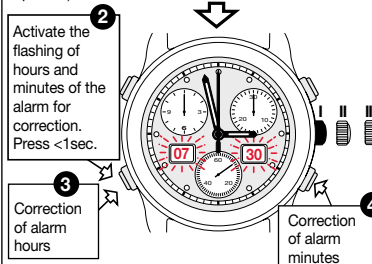

ALARM **G**

Set the alarm (cont.)

NOTE:
Once the hours and minutes of the alarm are set, activate or deactivate the alarm as follows:

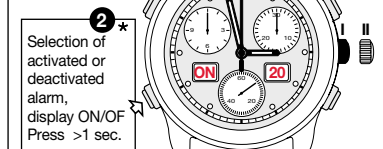


* If the alarm is active (On), a beep will confirm this function.
You can also check the alarm-bell by pressing pushbutton D for longer than 1 sec. (demo alarm mode).

NOTE:
When setting the alarm, make sure that the analog time (hands) corresponds to the digital time (right / left apertures). If it does not, please see paragraph "Setting the time".

TIMING MODE

H

Simple timing function

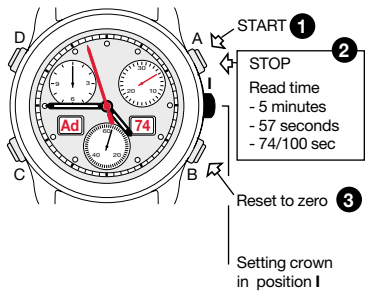

WARNING


Before taking the time, put back the chronograph hands to their original position.
If necessary, see paragraph SETTING THE COUNTERS TO ZERO.

1 to 3 order of functions

TIMING MODE

I

ADD function

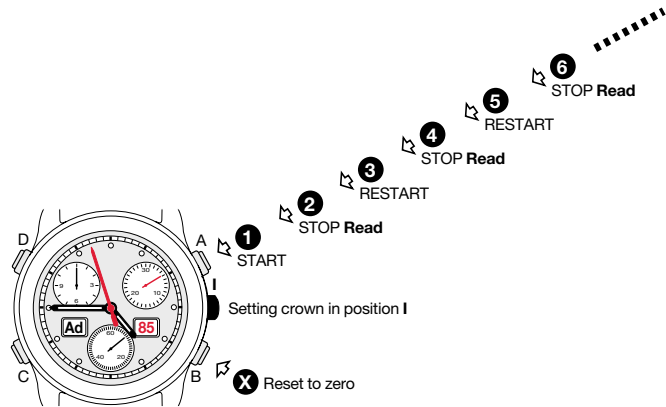


1 to X order of functions

TIMING MODE

J

SPLIT-TIME or INTERMEDIATE TIMES function

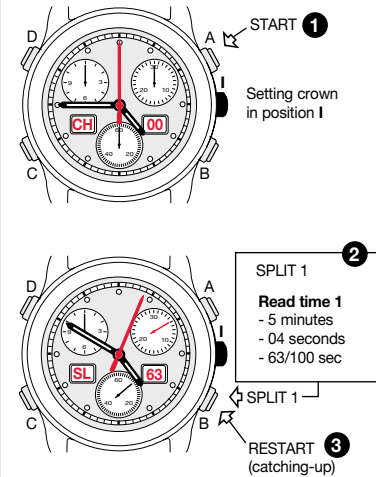


1 to 3 order of functions

TIMING MODE

K

SPLIT-TIME or INTERMEDIATE TIMES function (cont.)

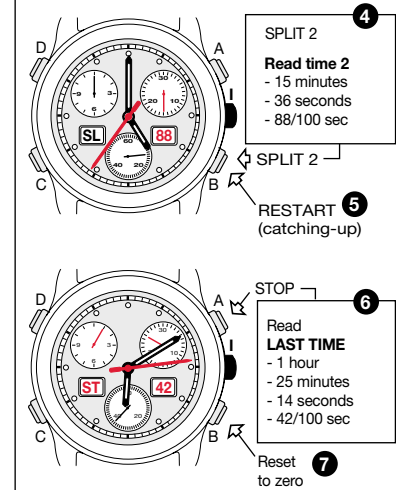


4 to 7 order of functions

TIMING MODE

L

LAP-TIME function

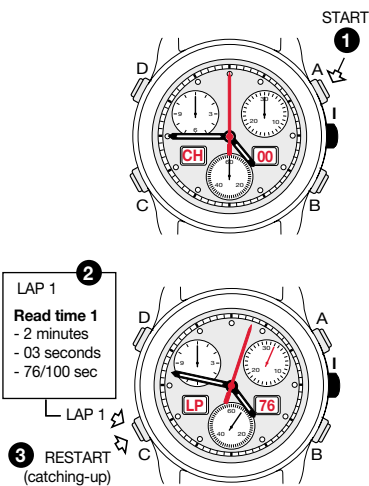


1 to 3 order of functions

TIMING MODE

M

LAP-TIME function (cont.)

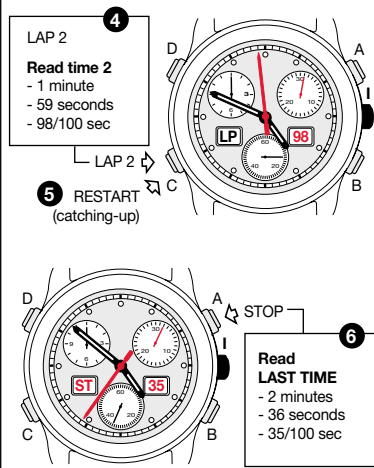


4 to 6 order of functions

TIMING MODE

N

LAP-TIME function (cont. and end)

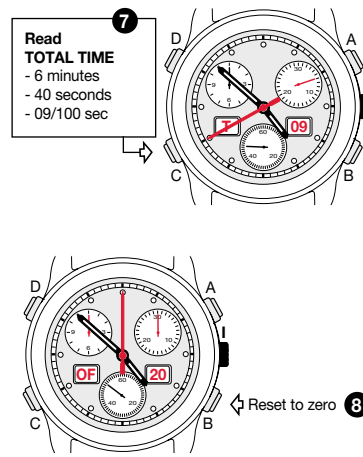


7 to 8 order of functions

CORRECTION MODE

O

Time zone correction Setting crown in position II

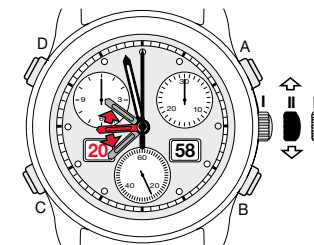

WARNING


When correcting the time zone, the hours of digital time (left indicator) will be modified as the hands are moved.

You can also adjust the digital time by hand.

CORRECTION MODE

P

Time zone correction (digital time) Setting crown in position II

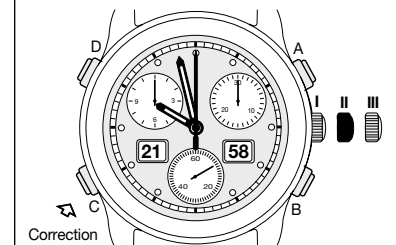

Correction of the hours in the left LCD aperture

NOTE:

Quick pressure on pushbutton: slowly put forward the hours of digital time.

Long pressure (>1 sec.) on pushbutton: quickly put forward the hours of digital time.